





3-STRAND BACK SPLICE

FIGURE 1

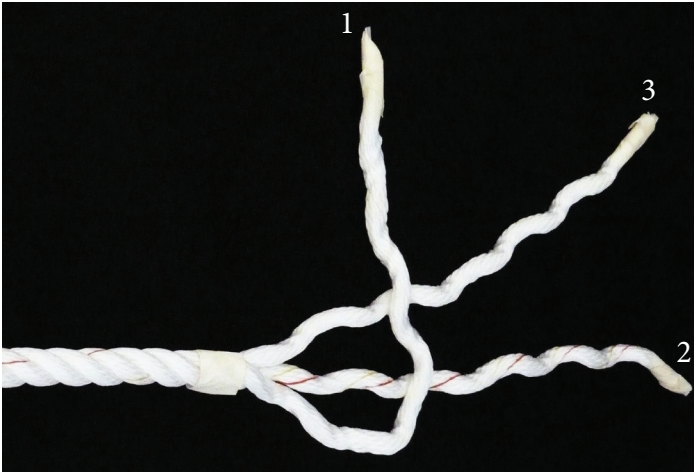


Step #1 – To neatly finish off the end of a twisted line, tape the main body of line 16 crowns from its end to keep it from unraveling. Unlay the strands and tape ends. Lay strand #1 across the other two as shown.

FIGURE 2

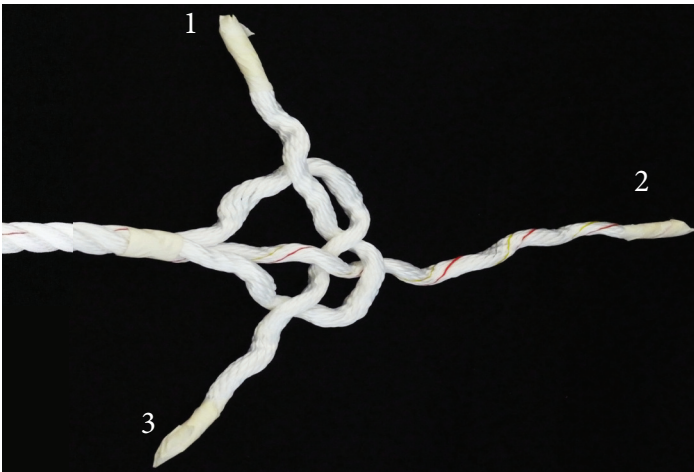

Step #2 – Tuck strand #3 over the first strand you move in the step above (strand #1), then behind the center strand (strand #2) and back over the first strand again (strand #1). Remove tape from main line and pull all strands snug.

FIGURE 3

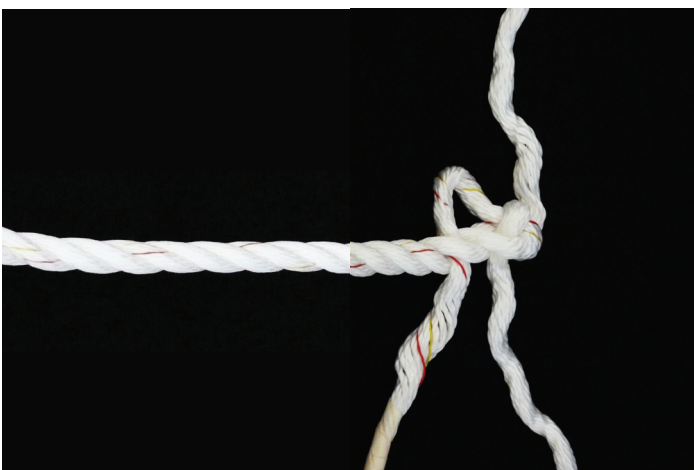

Step #3 – Tuck the strands in sequence, over and under the strands in the main body of the line, working against the twist as in the short splice.



3-STRAND BACK SPLICE

FIGURE 4



Step #4 – Continue tucking the strands until each strand is tucked for a total of 5 tucks. Clip protruding ends and roll the splice to smooth out.